SS-S3/S9

SERVICE MANUAL

Ver 1.1 2002.07

Photo: SS-S3

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model

- SS-S3 are speaker system in MHC-S3.
- SS-S9 are speaker system in MHC-S7AV, MHC-SV7AV.

SPECIFICATIONS

SS-S3/S9

Speaker system	3-way, 3-unit, bass-reflex type, magnetically shielded type
Speaker units	
Woofer:	15 cm, cone type
Subwoofer:	15 cm, cone type
Tweeter:	2.8 cm, dome type
Nominal impedance	6 ohms
Dimensions (w/h/d)	Approx. 235 x 470 x 265 mm
Mass	Approx. 7.3 kg net per speaker

Design and specifications are subject to change without notice.

SPEAKER SYSTEM

9-873-835-12
2002G0500-1
© 2002.07

Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

SONY®

DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

FRONT PANEL SECTION

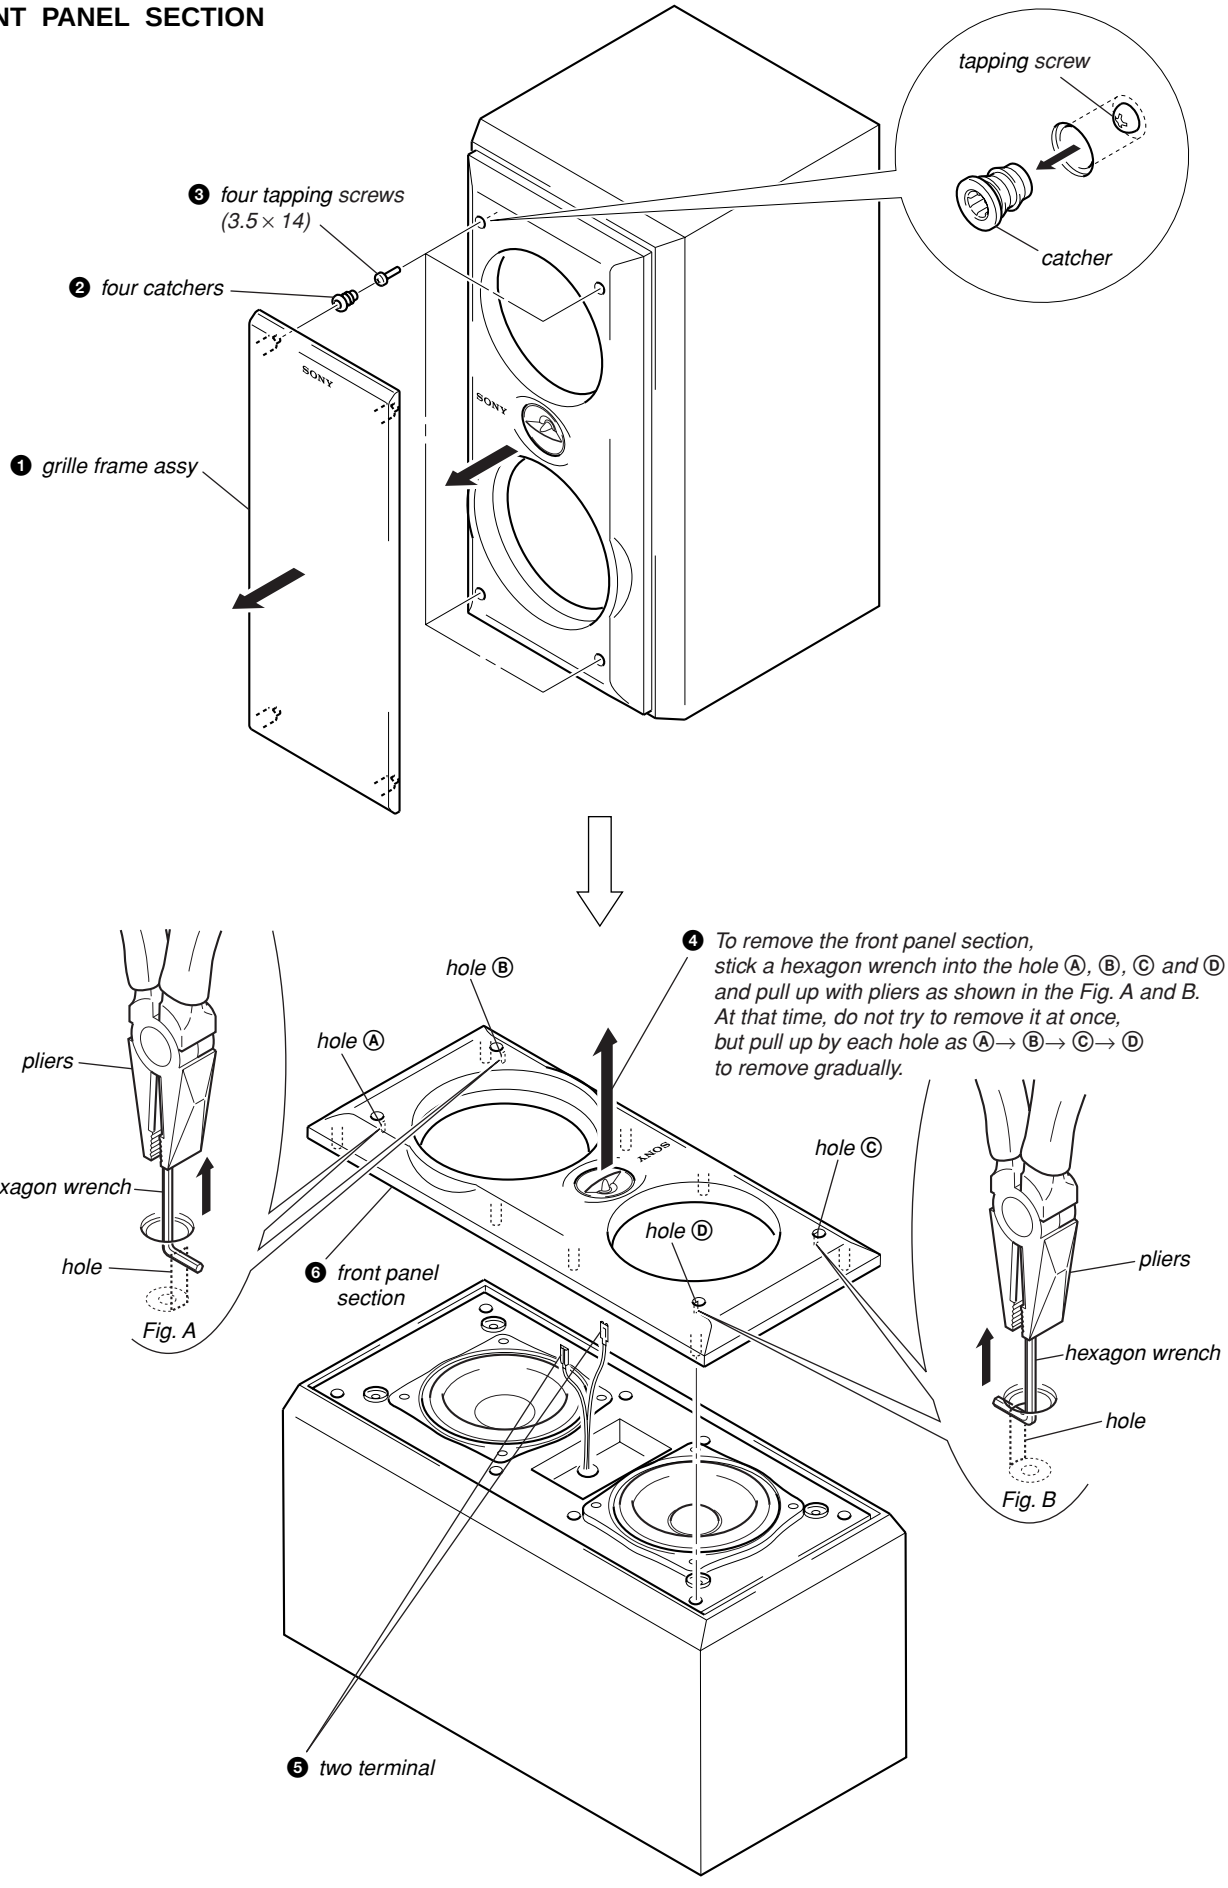
tapping screw
catcher
❸ four tapping screws (3.5 × 14)
❷ four catchers
❶ grille frame assy
SONY
❹ To remove the front panel section, stick a hexagon wrench into the hole Ⓐ, Ⓑ, Ⓒ and Ⓓ and pull up with pliers as shown in the Fig. A and B. At that time, do not try to remove it at once, but pull up by each hole as Ⓐ→ Ⓑ→ Ⓒ→ Ⓓ to remove gradually.
hole Ⓑ
hole Ⓐ
hole Ⓒ
hole Ⓓ
pliers
hexagon wrench
hole
Fig. A
❻ front panel section
pliers
hexagon wrench
hole
Fig. B
❺ two terminal

EXPLODED VIEWS AND PARTS LIST

NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts
  Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ ↑
  Parts Color Cabinet's Color

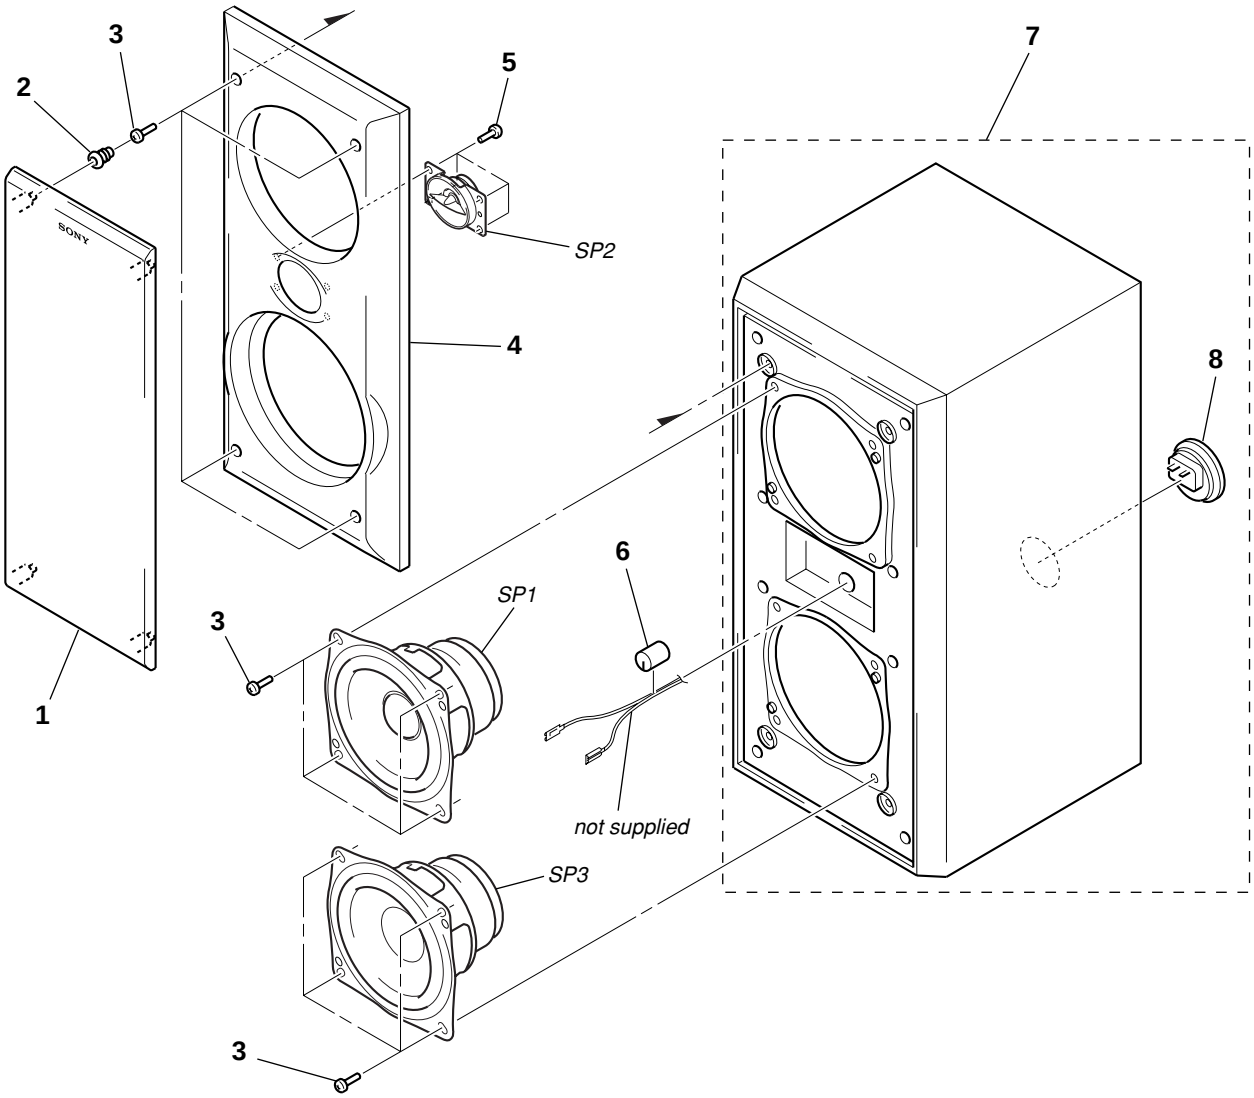

Ref. No.	Part No.	Description	Remark
1	A-4412-719-A	FRAME ASSY, GRILLE	
2	4-912-253-01	CATCHER	
3	4-874-614-21	SCREW (4) (3.5X14), TAPPING	
4	A-4412-720-A	PANEL ASSY, FRONT (SS-S9)	
4	A-4412-887-A	PANEL ASSY, FRONT (SS-S3)	
5	4-874-614-31	SCREW (4) (3.5X12), TAPPING	
6	4-218-300-01	PACKING (B)	
7	A-4412-886-B	CABINET ASSY, SPEAKER	
8	1-537-332-11	TERMINAL BOARD	
SP1	1-529-979-11	SPEAKER (15cm) (WOOFER)	
SP2	1-529-980-11	SPEAKER (2.5cm) (TWEETER)	
SP3	1-529-978-11	SPEAKER (15cm) (SUB WOOFER)	

Ref. No.	Part No.	Description	Remark
		ACCESSORIES	
		**********	
	1-558-848-11	CORD, SPEAKER	
	4-235-868-11	MANUAL, INSTRUCTION	
		(ENGLISH, FRENCH, GERMAN, SPANISH, DUTCH, SWEDISH, ITALIAN, PORTUGUESE, TURKISH, POLISH, HUNGARIAN, GREEK, FINNISH, DANISH, CZECH, RUSSIAN)	
		(AEP, UK)	

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2001.04	New
1.1	2002.07	Change of DISASSEMBLY of Front Panel Section. (SPM-02051)